ACTION®

MODEL: ACN-3518

5" Portable Black & White Television with AM/FM Radio

OWNER'S MANUAL

MADE IN CHINA

CAUTION: REMOVE AC PLUG FROM WALL OUTLET AND BATTERY WHEN THIS SET IS NOT IN USE FOR A PROLONGED PERIOD.

WARNING: TO PREVENT DAMAGE WHICH MAY RESULT IN FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS SET TO RAIN OR MOISTURE.

WARNING HIGH VOLTAGE: LIVE PARTS ARE ACCESSIBLE WHEN THE REAR CABINET IS REMOVED.

CAUTION: TO MINIMIZE RISK OF PERSONAL INJURY OR DAMAGE TO THE UNIT FROM BATTERY LEAKAGE, ALL BATTERIES MUST BE REMOVED FROM THE UNIT WHEN IT IS NOT IN USE.

FRONT VIEW

REAR VIEW

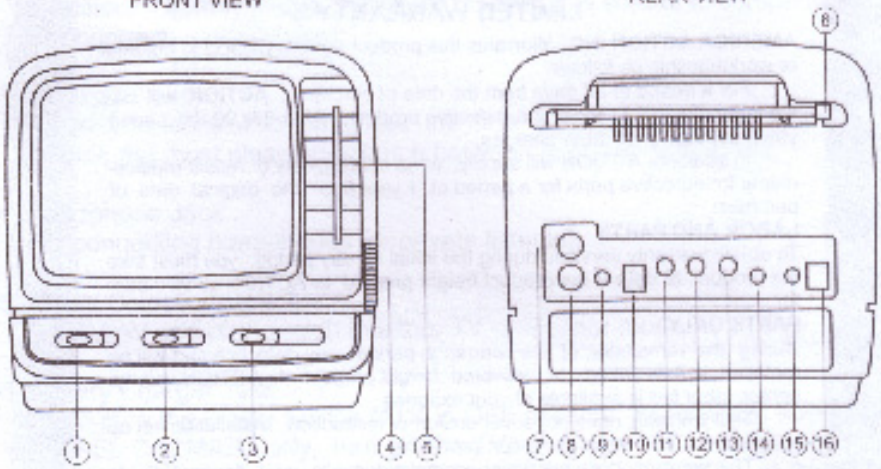

BOTTOM VIEW

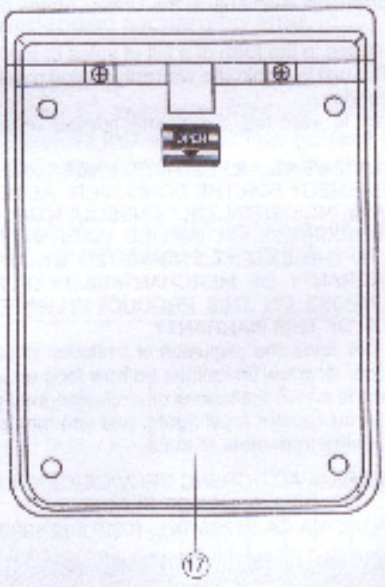

CONTROL FUNCTIONS

1. Power-Function Selector
   Turn the unit on in either TV Operation (Left Position) or Radio Operation (Right Position). The unit is turned OFF when the switch is in the Center Position.

2. TV/Radio Band Selector
   Select one of the three TV broadcasting bands (VHF Low, VHF High and UHF). For Radio operation, Select either AM or FM broadcasts for Radio reception.

3. Volume Control
   Adjust the volume for both TV and Radio Operation by sliding this control.

4. Tuning Control
   Rotate to tune in the desired TV or Radio station.

5. Dial Scale
   Indicator for the tuning of a station for both Radio and TV reception.

6. Telescoping Antenna
   Adjust length and angle to optimize TV and Radio reception.

7. Video Input Jack (See below)

8. Audio Input Jack
   Connection for AV (Audio/Video) input terminals, set TV/AV selection switch (15) to AV mode, connect the AV (Audio/Video) terminals with other equipments (UHS VCR, TV Game...etc).

9. External Antenna Jack
   For connecting an external antenna.

10. DC Power Jack
    Connecting the AC/DC Adapter to this jack for external power operation.

11. V-Hold Control
    Use to correct vertical movement in the picture. To eliminate vertical roll adjust this control back and forth until the picture is stable.

12. Brightness Control
Adjust this control so that the picture is bright enough for room lighting conditions. It may be necessary to readjust this control to compensate for change in room lighting.

13. Contrast Control
Adjust this control to bring out the fine details in the picture and to provide the most pleasing balance between light and dark areas.

14. Headphone Jack
For connecting headphones for private listening.

15. TV/AV Selection Switch
Set TV/AV selection switch to either TV or Monitor mode.

16. Battery Charger Jack
Make sure the Power Switch (1) is in OFF position. To recharge batteries, NICKEL CADMIUM only, turn off the TV, plug the AC adaptor into a standard 120V household outlet, connect the output plug of the AC adaptor to this charge input jack. Recharging time: please refer to battery manufacturer's recommended recharging time.

17. Battery Cover & Compartment
Remove the battery cover by pressing down on the cover and sliding in the direction as indicated by the arrows. The battery compartment holds 10 "D" cell battery, either rechargeable or non-rechargeable.

IMPORTANT: DO NOT ATTEMPT TO RECHARGE NON-RECHARGEABLE BATTERIES, THEY MAY EXPLODE.

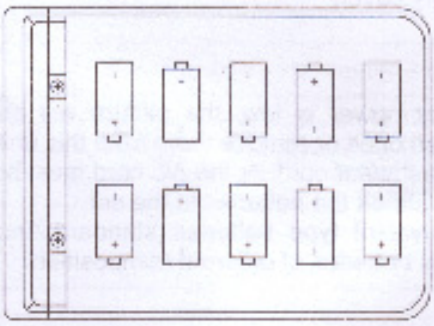

TV OPERATIONS

1. Place the Power Selector switch in the TV position
2. Extend the Telescoping antenna.
3. Place the TV Band Selector switch in the desired band.
4. Slowly rotate the Tuning control to select the desired station. Watch the Dial Scale showing the channel numbers. You may need to adjust the antenna while tuning.
5. Slide the Volume control to the desired level.

POWER SUPPLY

[AC POWER (HOUSE CURRENT) OPERATION]
This unit is designed for 12V operation but can also be used on standard house current with an AC adaptor.
CAUTION: Remove the batteries when this set is operating from AC for a long time (For normal batteries only).

(CAR BATTERY OPERATION)
Make sure your car has a 12V negative ground battery supply system. Plug one end of the DC cord into DC jack (10), the other end into the cigarette lighter receptacle of your car.
CAUTION: Remove plug from cigarette lighter receptacle when this set is not used.

(DRY BATTERY OPERATION)
1. While pressing the battery cover on bottom surface, slide it off, as the direction of arrow shown.
2. Inset 10 "D" size dry batteries, (not included). Be sure to observe polarity before installation
3. Replace the battery cover.

NOTE:

1. When the battery power is low, the picture will shrink. Replace the batteries with fresh ones or remove them from this unit.
2. The DC plug from the car cord, or the AC cord must be removed from DC jack, then to operate on the batteries in the set.
3. Replace with equivalent type batteries (standard Zinc Carbon or Alkaline types). Do not mix batteries of different composition.

ANTENNAS

Use the attached rod antenna in good TV signal areas. But use the external antenna when the rod antenna provides a poor signal.
Rod antenna: Adjust the length, direction for the best picture.
External antenna Pad: Use the matching unit, (Included), when connecting the cable to this set.

RADIO OPERATIONS

1. Place the Power-Function Selector switch in the RADIO position.
2. Set the Radio Band selector to the desired band (AM or FM).
3. Slowly rotate the Tuning control to select the desired radio station.
4. Slide the Volume control to the desired level.
5. Fully extend the Telescoping Antenna and adjust its direction for the best reception.
6. Turn the unit OFF by placing the Power-Function Selector to the OFF position.

AV OPERATIONS

1. Place the Power Selector switch in the TV position.
2. Place the TV/AV Selector switch (15) in AV position.
3. Connect the AV terminal and other equipments.

NOTE: This unit can be connected with VCR, CAMERA, LDP....etc. and operate as a monitor.

4. Slide the volume control to the desired level.

SPECIFICATION

TV Channel	VHF Low: CH2-CH6
	VHF High: CH7-CH13
	UHF: CH14-CH69
Radio Frequency	AM: 530-1600 kHz
	FM: 88-108 MHz
Picture Tube	5"
Sound Output	2W
Power Supply	1) 12-15V AC ADAPTOR
	2) 10 pcs "D" size battery
	3) Car battery (use car cord)
Dimension	215(L) x 155(W) x 155(H)
Weight	2.4kg
Accessories	1) Car Cord
	2) AC Adaptor
	3) Antenna pad

LIMITED WARRANTY

AMERICA ACTION INC. Warrants this product against defects in material or workmanship as follows:

For a period of 90 days from the date of purchase, **ACTION** will pay the labor charges to repair the defective product. After this 90 day period, you must pay for all labor charges.

In addition, **ACTION** will supply, at no charge, new of rebuilt replacements for defective parts for a period of 1 year from the original date of purchase.

LABOR AND PARTS

To obtain warranty services during the initial 90 day period, you must take the product, or deliver the product freight prepaid to **ACTION** service center.

PARTS ONLY

During the remainder of the warranty period, any defective part will be replaced if it is taken, or delivered freight prepaid to **ACTION** service center, labor fee is available at your expense.

This warranty does not cover customer instruction, installation set up adjustments, and signal reception problems.

This warranty does not cover cosmetic damage, and damage due to acts of accident, misuse, abuse negligence of the product, including the antenna. This warranty is valid only in the United States of America/Canada.

Proof of purchase in the form of a bill of sales or invoice receipt which is evidence that the unit is within the warranty period must be presented to obtain warranty service.

This warranty is valid only if the serial number appears on the product.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY FOR THE CONSUMER. ACTION SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, as a result the above limitations or exclusion may not apply to you. This warranty give you specific legal rights, and you may also have other rights which will be vary from state to state.

AMERICA ACTION INC SERVICE CENTER
100 EXCHANGE PLACE
POMONA CA 91768 TEL: (909) 869 6600